




E I C H H O L T Z

103728 DESK SHAKER

ASSEMBLY INSTRUCTION

PARTS

2x

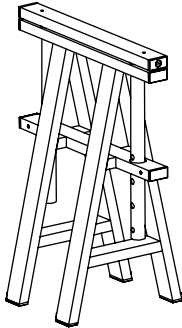


(A)

4x




(B)

1x

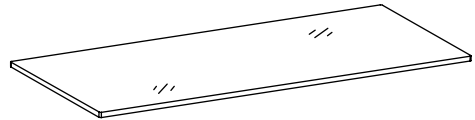

(C)

1

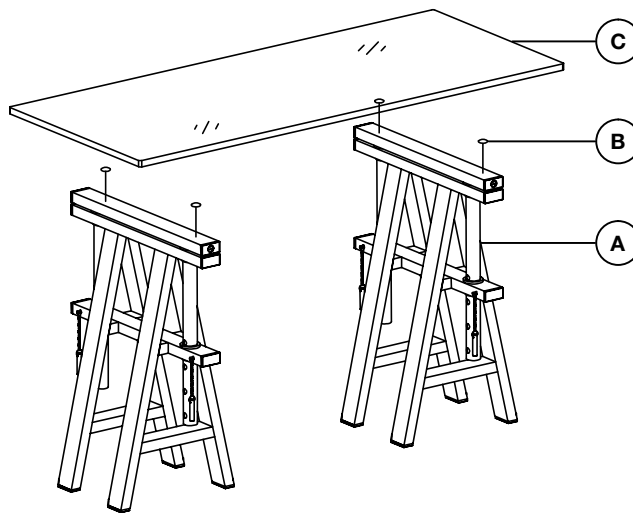

2

